


RAINWATER TANK EXCAVATION/INSTALLATION INSTRUCTIONS

Underground 10,000L SLIMLINE Rainwater Tank Light Trafficable 2 Tonne Point Load Only Tank + Lid Total Mass = 7.8 Tonnes

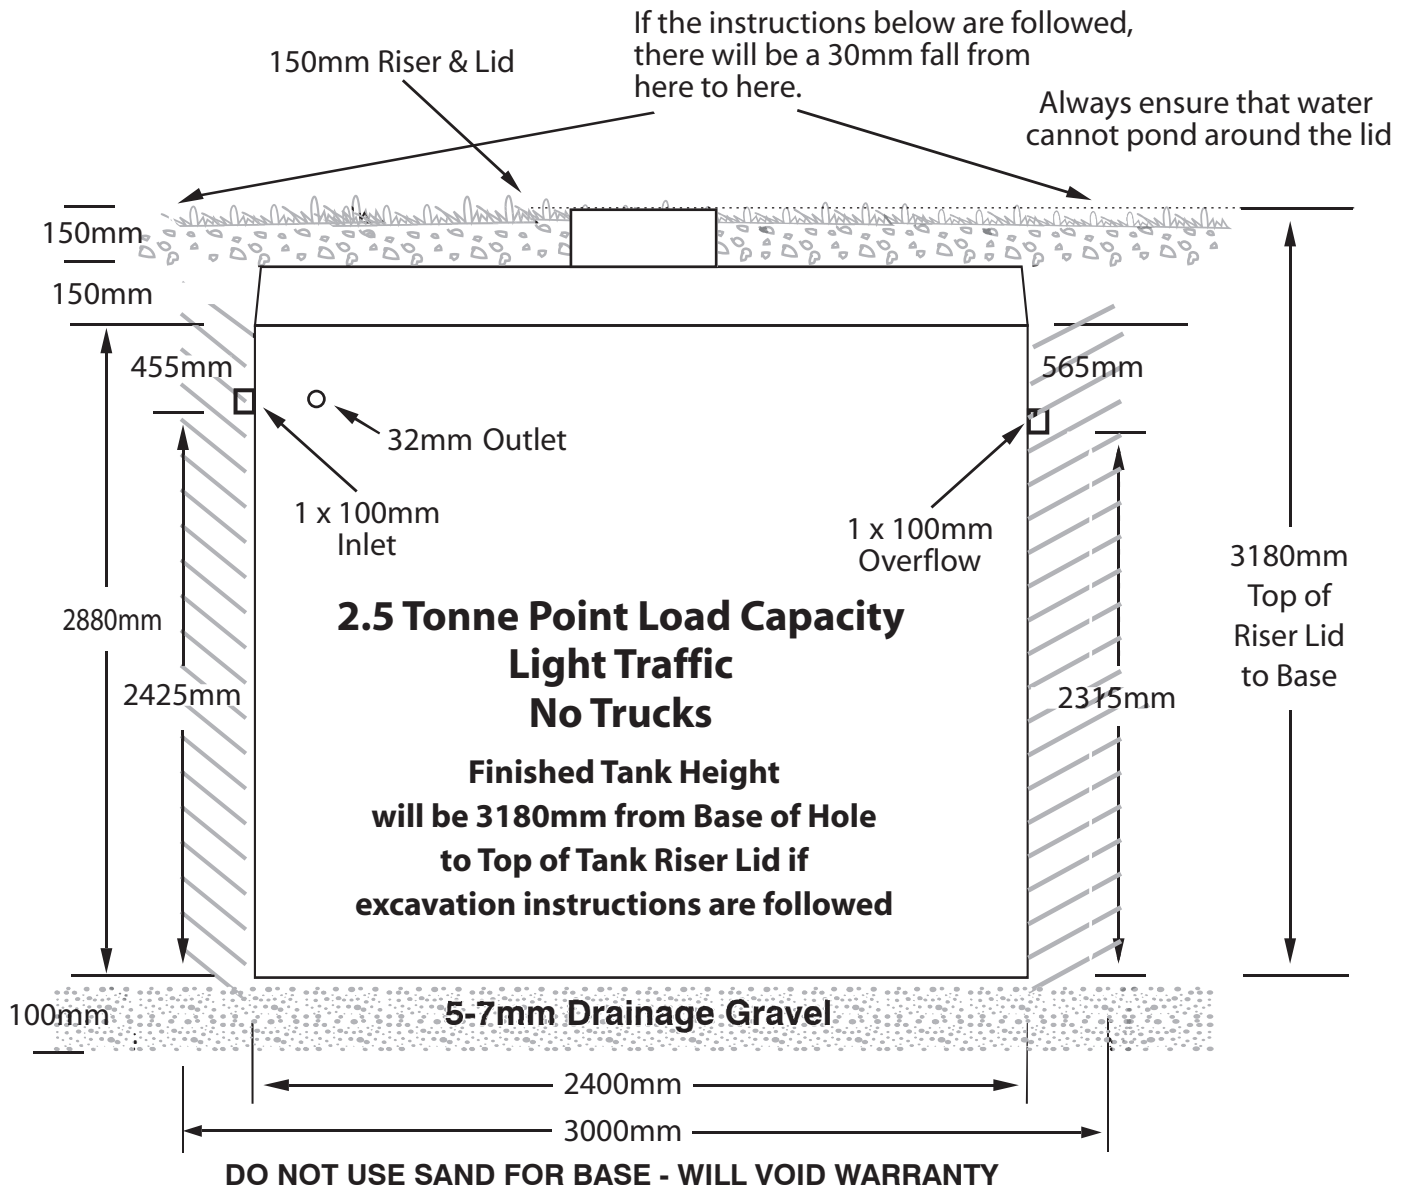

Tanks must be installed perfectly level. Failure to do so will void warranty.

EXCAVATION INSTRUCTIONS

1. Dig hole 3000mm Square
2. Depth of Hole 3280mm
3. Cover Base of Hole with 100mm of 5-7mm Drainage Gravel ensuring finished base is perfectly level
Do not have rocks in the base area. It will void warranty.
4. Back Fill with Sand/Soil NOT ROCKS
5. To prevent flotation, fill tank to at least 70% (7000Lt). Failure to fill tank may cause your tank to float!
Taylex takes NO RESPONSIBILITY for floating tanks. If tank floats, it is up to the installer to rectify and pay for any costs that may be incurred.